

Installation Instructions ACP 100MN & ACP 200MN



an INFINIT[®] company

800.882.9110 | 208.772.8515 | www.transtector.com

Your satisfaction with our product and service is important to us. If you have any questions, comments or concerns, please contact us at 800.882.9110 or visit our website at www.Transtector.com. We look forward to continuing to serve your protection needs.

Thank you for your recent purchase of our surge protection solution.

3. SAVE THESE INSTRUCTIONS


2. Read and understand all instructions.

1. MPORTANT SAFETY INSTRUCTIONS

Warning

Installation Instructions ACP 100MN & ACP 200MN

- 1. These products are intended for use only on 15A 120Vac & 10A 240Vac circuits as specified in Section 4.
- 2. **Warning!** Disconnect power upstream from the device when wiring to avoid shock hazard.
- 3. **Mounting the ACP 100MN & ACP 200MN Series:** See Figure 1. Mount unit as close as possible to the equipment to be protected.
- 4. Wiring the ACP 100MN & ACP 200MN
 - 4.1 Wiring the ACP 100MN: Connect the source 120Vac phase wire to the provided lead marked LINE (Black). Connect the 120Vac phase wire of the equipment to be protected to the provided lead marked LOAD (Red). Connect the source and equipment neutral wires to the provided lead marked NEUTRAL (White).
 - 4.2 Wiring the ACP 200MN: Connect the source 240Vac phase wire to the provided lead marked LINE (Black). Connect the 240Vac phase wire of the equipment to be protected to the provided lead marked LOAD (Red). Connect the source and equipment neutral wires to the provided lead marked NEUTRAL (White).

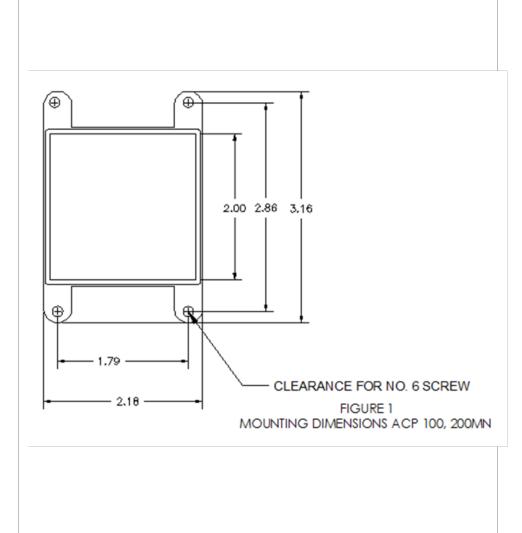

1200-140 REV C