



**100/1000BASE-X to 10/100/1000BASE-T**

**802.3at PoE+ Media Converter**



**Model: TT-MC-1GP+SFP**

**User's Manual**

## 1. PRODUCT FEATURES

### Gigabit Ethernet 802.3at PoE+ Media Converter : TT-MC-1GP+SFP

#### ■ Interface

- RJ45 interface with **Data + Power** output
- SFP fiber optic slot
- DC 52V~56V power input socket

#### ■ PoE

- Complies with IEEE 802.3af and IEEE 802.3at standard, mid-span PSE
- Provides DC 52V~56V power over RJ45 Ethernet cable to devices with Ethernet port
- Supports PoE power up to 30 watts for PoE port
- Auto detects IEEE 802.3at/IEEE 802.3af PoE equipment, protecting the devices from being damaged by incorrect installation
- Remote power feeding up to 100m
- IEEE 802.3at/IEEE 802.3af splitter device compatibility

#### ■ Hardware

- Metal case
- LED indicators
  - Power LED
  - PoE-in-use
  - Fiber LNK / ACT
  - TP LNK / ACT
- DIP switch: LFP (Link Fault Passthrough) mode selection
- 9K maximum frame size supported
- Wall-mount or DIN-rail installation (optional)

## 2. CHECKLIST

Your TT-MC-1GP+SFP carton should contain the following items:


Media Converter x 1	AC-DC Adapter (Input: 52~56V DC) x 1
	



**Note:** The TT-MC-1GP+SFP comes with one vacant SFP module slot. The mini GBIC SFP module is not included in the package and should be purchased separately based on your application needs.


### 3. PRODUCT OUTLOOK

There is one RJ45 twisted-pair jack (auto-MDI/MDI-X), one 100/1000X fiber-optic SFP slot and four LED indicators.

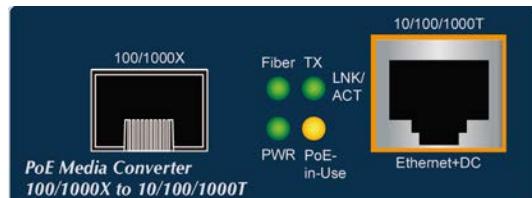

**Figure 1:** Front View of the TT-MC-1GP+SFP

There is one DIP switch for Link Fault Passthrough (LFP) feature. It is turned on for Link Loss Carry Forward (LLCF) and Link Loss Return (LLR) detection but this feature is not operable when turned off. Please refer to section 4 for more information. There is also one DC 52V ~ 56V power socket for the Gigabit Ethernet 802.at PoE+ Media Converter.

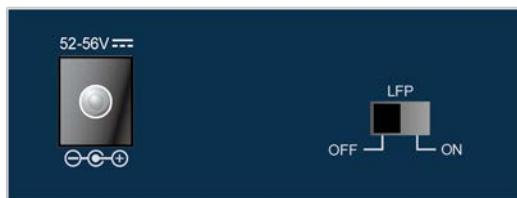

**Figure 2:** Rear View of the TT-MC-1GP+SFP

#### Power Information

The power jack of the Gigabit Ethernet 802.at PoE+ Media Converter measures **2.1mm** in diameter and comes with 52V ~ 56V DC power input. It conforms to the bundled AC-DC adapter.

### 4. LINK FAULT PASS-THROUGH (LFP)

The LFP function includes LLCF and LLR. LLCF and LLR can immediately alarm administrators the issue of the link media and provide efficient solution to monitor the network. The LFP function can be disabled or enabled by the DIP switch.

LLCF means when a device is connected to the converter and the TP line loses the link, the converter's fiber will disconnect the transmission link. LLR (Link Loss Return) means when a device is connected to the converter and the fiber line loses the link, the converter's fiber will disconnect the transmission link.

 Note:	LFP function is ON by default setting. If you are familiar with the network installation and for diagnostic purpose (i.e. check which end is broken), you can turn it off and reset the converter to make it take effect. Otherwise, please keep it in the default position.
---	--

## 5. INSTALLING THE CONVERTER

To install the TT-MC-1GP+SFP, simply complete the following steps:

### Ethernet Installation

**Step 1:** Turn off the power of the device/station in a network to which the TT-MC-1GP+SFP will be attached.

**Step 2:** Ensure that there is no activity in the network.

**Step 3:** Attach fiber cable from the TT-MC-1GP+SFP to the fiber network (this requires an SFP module).

**Step 4:** Attach a Cat.5/5e/6 cable from the 10/100/1000BASE-T network to the RJ45 port on the TT-MC-1GP+SFP.

**Step 5:** Connect the 52V~56V DC power adapter to the TT-MC-1GP+SFP and verify that the Power LED lights up.

**Step 6:** Turn on the power of the device/station; the TX Link and FX Link LEDs should light up when all cables are attached.



**Figure 3:** TT-MC-1GP+SFP Installation


 Note	<ol style="list-style-type: none"><li>1. Please check the link-budget of your SFP transceivers and its physical wiring distance. In some installation, an in-line optical attenuator may be required to protect your transceivers.</li><li>2.. Cat5/5e/6 Ethernet cables in or straight/crossover with RJ45 connectors are accepted; please refer to section 8 for more about the wiring distance of your TP, optic-fiber networks.</li></ol>
--	---

### PoE Function

#### The installation of the TT-MC-1GP+SFP and the IEEE 802.3at/802.3af Injector/Splitter.


Before your installation, it is recommended to check your network environment. If there is any IEEE 802.3at/802.3af devices that need to be powered on, the TT-MC-1GP+SFP can provide you with a way to supply power for this Ethernet device conveniently and easily without separate power cables.

The TT-MC-1GP+SFP equips an AC-DC adapter with DC 54V input and it injects the DC power into the twisted-pair cable.

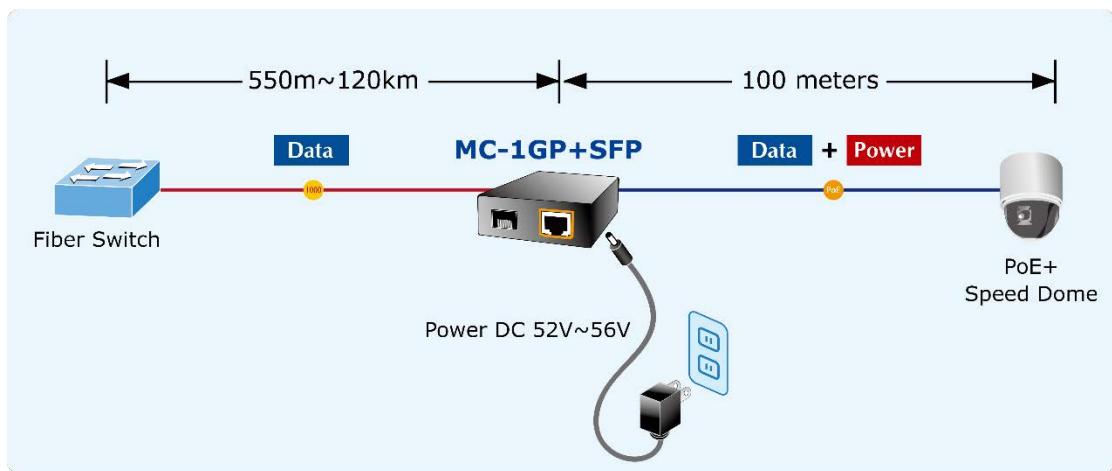

—○— 1000BASE-SX/LX Fiber Optic  
—○— 1000BASE-T UTP with PoE

For the places where it is hard to find a power inlet or outlet, the TT-MC-1GP+SFP provides the easiest way to power your PoE capable device such as an IP camera or wireless access point via IEEE 802.3at or 802.3af and is compatible with most PoE splitters.

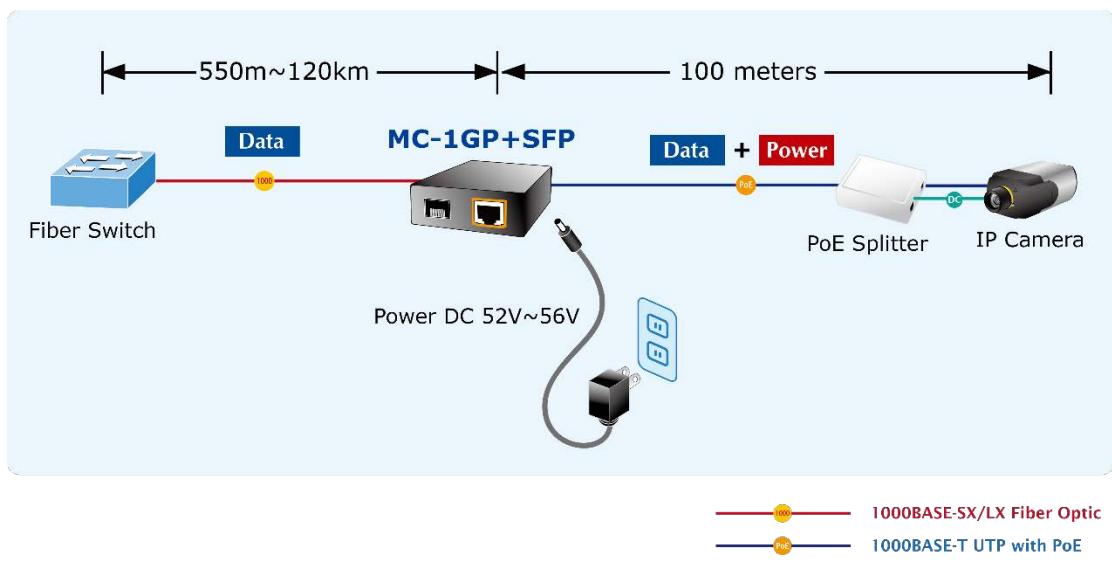

—○— 1000BASE-SX/LX Fiber Optic  
—○— 1000BASE-T UTP with PoE

## 6 DUPLEX MODE SUPPORT

The TT-MC-1GP+SFP RJ45 port supports triple speed -- 10/100/1000BASE-T auto-negotiation. It will auto detect the link speed and the duplex mode by default with its link partner. The fiber port (100/1000BASE-FX/SX/LX) allows **100/1000Mbps full duplex** by auto-negotiation. Please also check the setting of the link partner to ensure compatibility.

## 7. LED INDICATION

System		
LED	Color	Description
PWR	Green	Lit indicates the device is powered.

### 10/100/1000BASE-T Port

LED	Color	Function
LNK/ACT	Green	Blinks
		Lights
		Off
PoE in Use	Orange	Lights
		Off

### 100/1000BASE-X Fiber Port

LED	Color	Function
LNK/ACT	Green	Blinks
		Lights
		Off

## 8 CABLE CONNECTION PARAMETERS

The wiring details are shown below:

Duplex	Connection	Limitation (max.)
<b>Twisted Pair</b>		
Half/Full	Node to Node Node to Switch/Hub	100 meters
<b>Fiber Optic Cables:</b>		
Standard (Wavelength)	100BASE-FX (1310nm)	1000BASE-SX (850nm)
Fiber Type & Cable Specifications	Multi-mode Single mode	50/125µm or 62.5/125µm 9/125µm

## 9. PRODUCT SPECIFICATIONS

Model	TT-MC-1GP+SFP
Interface	
Copper Port	10/100/1000BASE-T Ethernet TP interface Auto-negotiation, auto MDI/MDI-X with PoE injector function

<b>SFP Interface</b>	100/1000BASE-X SFP interface
<b>Fiber Mode</b>	Can vary depending on SFP Module used (sold separately)
<b>Fiber Port Type (connector)</b>	SFP, LC type (sold separately)
<b>Fiber Maximum Distance</b>	Can vary depending on SFP Module used (sold separately)
<b>Power Over Ethernet</b>	
<b>PoE Output</b>	IEEE 802.3af Power over Ethernet PSE IEEE 802.3at Power over Ethernet Plus PSE
<b>Power Output</b>	PoE 52-56V DC, 30 watts
<b>PoE Power Supply Type</b>	Mid-span
<b>Power Pin Assignment</b>	4/5 (+), 7/8 (-)
<b>PoE Power Budget</b>	30 watts
<b>Hardware Specifications</b>	
<b>Switch Architecture</b>	Store-and-Forward
<b>Flow Control</b>	Back pressure for half duplex mode IEEE 802.3x pause frame for full duplex mode
<b>Maximum Frame Size</b>	9K
<b>LED</b>	System: PWR Fiber 100/1000BASE-X: LNK / ACT TP 10/100/1000BASE-T: LNK / ACT PoE: Power-in-use
<b>Dimensions (W x D x H)</b>	94 x 26 x 70 mm
<b>Weight</b>	0.21kg
<b>Power Supply</b>	52-56V DC, external AC-to-DC adapter
<b>LFP Mode</b>	Enable: Shut down either TP port or fiber port that is broken Disable: Link LED indicators still on if connection of the other end is broken
<b>Installation</b>	Wall-mount or DIN-rail installation
<b>Standards Conformance</b>	
<b>Regulatory Compliance</b>	FCC Part 15 Class A, CE
<b>Protocols and Standards Compliance</b>	IEEE 802.3 Ethernet IEEE 802.3u 100BASE-TX/100BASE-FX IEEE 802.3ab Gigabit Ethernet IEEE 802.3z Gigabit Ethernet over Fiber Optic IEEE 802.3x Flow Control IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet enhancements standard
<b>Cables</b>	TP: Cat 5 / 5e / 6 UTP cable Fiber: Multi-mode: 50/125 $\mu$ m or 62.5/125 $\mu$ m optic fiber Single mode: 9/125 $\mu$ m optic fiber
<b>Environment</b>	
<b>Temperature</b>	0~50 degrees C
<b>Humidity</b>	5~90% (non-condensing)

# Customer Support

Thank you for purchasing Transtector products. You can browse our online resources and User's Manuals on [www.Transtector.com](http://www.Transtector.com). If you require sales or support information, please contact the Transtector support team using the information found below or using Transtector's online chat tool.



Transtector  
10701 Airport Road  
Hayden, Idaho 83835  
USA  
Toll Free: (800) 882-9110  
International: (208) 635-6400  
[www.Transtector.com](http://www.Transtector.com)