

## Series 700 A/V-S Power Conditioner

---

30 kVA (60K(i)) Power Conditioner with  
Voltage Regulation (60 Hz)

### Owners Manual

---

Important safety instructions - save these instructions and review prior to using equipment



30kVA (60k(i)) Power  
Conditioner with  
Voltage Regulation (60  
Hz)

30 kVA (60K(i)) 60 Hz Model Front Access Design

## TABLE OF CONTENTS

Receiving and Inspecting the Unit	3
General Description	4
Safety Precautions	5
Preliminary Installation	6-7
Weights, BTU and Dimensions	7
Input Wire Size, Grounding and Output Wiring	8-9
Installation	10-12
Bypass Switch	13
Start - up	14
Preventive Maintenance	15
Performance Checklist	16
General Troubleshooting	17
Parts List	18
Warranty	19
 APPENDIX A	 20
Cabinet Layout	21-23
Seismic Calculations	24
Symbol Library	25
Notes	26

## RECEIVING & INSPECTING THE UNIT

### INSPECTING THE POWER PROCESSOR

Upon receipt of the unit, visually inspect for shipping damage. If any damage is found, the Purchaser must contact the Carrier immediately and file a shipping damage claim.

**NOTE:** Be sure to remove the front and side panels, and inspect the inside of the unit for shipping damage.

If any internal damage has occurred or any external damage that could affect the operation of the unit, please contact Transtector.

**FOR ASSISTANCE CALL 1-800-882-9110 X 6112 (8am-5pm Pacific Time)**

**AFTER HOURS CALL 1-800-521-4792**


### STORING

If it is necessary to store the unit for a period of time before it is installed, be sure to place the unit in a clean, dry area. To prevent excessive dust from accumulating on the unit, it is advisable to protect it by replacing it in the original container (if possible). If the original container is not available it is recommended that all openings that lead internally into the unit are covered so that dust, water or any other substance cannot enter the internal components of the system. The unit must be handled at all times with the same care you would give to any piece of precision industrial equipment.

### REMOVING THE POWER PROCESSOR FROM PALLET



Please take special care when removing the unit from the pallet. Proper equipment must be used for lifting and moving, and all safety precautions should be taken. Each unit is bolted to a wooden pallet. In order to properly remove the cabinet from the pallet, all bolts connecting the unit to the pallet must be removed completely. The unit can then be lifted off the skid using a pallet jack or a fork lift, as shown below. When lifting the unit off of the pallet, be sure to take proper safety precautions. Serious injury and/or unit damage can result otherwise.

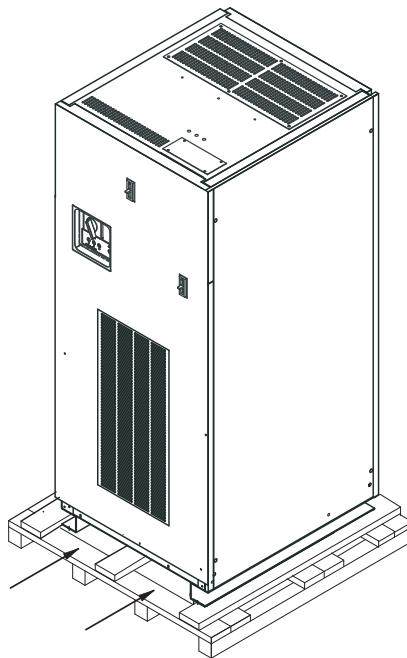

## GENERAL DESCRIPTION

The Series 700A/V-S Power Processor is designed to supply reliable, clean regulated power to critical loads. An efficient design with state of the art micro-processor controlled solid state devices provide immunity to all line disturbances.

The basic design consists of a three phase triple shielded isolation transformer with seven separate voltage taps per phase. Output regulation is achieved by monitoring the input and automatically switching taps anytime the input line sags or surges. The use of a triple shielded isolation transformer provides superior common mode and transverse mode noise attenuation. Automatic switching occurs during current zero allowing noise free switches for both leading and lagging power factor loads that are connected to the Series 700A/V-S.

## MONITOR

Monitoring of the Series 700A/V-S is simple, clean and effective. Three green light indicators are utilized to display "POWER ON" (output line to neutral for each phase) and one red light indicator to display "ALERT". The "POWER ON" display is connected directly to the output that indicates the Series 700A/V-S is operating properly with just a quick glance. The "ALERT" display represents an over-temp problem or output voltage loss (optional) when illuminated, and will shut down the output, but cooling fans remain on. Over-temp thermal sensors are strategically located at critical points on the regulator assemblies and transformer. The main AC input circuit breaker must be turned off in order to reset the "ALERT" light.

## PROTECTION

Protection is accomplished very effectively to minimize failures and the cost of repairs. A total of five major devices protect the Series 700A/V-S.

1. The input is protected with an integrally mounted AC circuit breaker for abnormal current overloads and provides a convenient means of disconnecting utility power.
    - A. As an option the input breaker may be equipped with a shunt trip device that is interfaced with a REMOTE EMERGENCY POWER OFF PUSH BUTTON. By pressing this button, the input breaker will trip and disable the Series 700A/V-S completely. The input breaker must be physically reset before unit will turn on again.
  2. The main transformer is protected by fuse links connecting the SCR regulators together, and are designed to clear in the event that two or more SCR's should fail. This will prevent a transformer tap short and the possibility of transformer failure.
  3. (Optional) The output of the Series 700A/V-S is constantly monitored for extreme over and under voltage conditions. This device monitors each output phase and will electronically disable the Series 700A/V-S when any phase exceeds +10% or -10% of nominal output voltage.
  4. Over temp sensing devices are mounted at critical points on the SCR regulating assembly and the main transformer. When an over temp condition exists the "ALERT" light will illuminate and hold until the over temp is corrected. There are no automatic shut-off circuits for the "ALERT" condition. The main AC input breaker must be turned off in order to reset the "ALERT" light.
  5. Each output of the Series 700A/V-S is protected with an integrally mounted AC breaker for abnormal current overloads and provides a convenient means of disconnecting power from the load.
-

## SAFETY PRECAUTIONS



### \*\*\*\* WARNING \*\*\*\*



**THERE ARE DANGEROUSLY HIGH VOLTAGES PRESENT WITHIN THE ENCLOSURE OF THE POWER SUPPLY SYSTEM.**

**CAUTION MUST BE TAKEN WHEN WORKING WITH THE SYSTEM.**

**IT IS RECOMMENDED THAT ALL WORK BE PERFORMED BY QUALIFIED ELECTRICAL PERSONNEL ONLY.**



### \*\*\*\* CAUTION \*\*\*\*



**RISK OF ELECTRICAL SHOCK AND HIGH SHORT CIRCUIT CURRENT. THE FOLLOWING PRECAUTIONS SHOULD BE OBSERVED WHEN WORKING ON THE UNIT:**

- 1) REMOVE WATCHES, RINGS, OR OTHER METAL OBJECTS.**
- 2) USE TOOLS WITH INSULATED HANDLES.**
- 3) WEAR RUBBER GLOVES AND BOOTS.**



### \*\*\*\* CAUTION \*\*\*\*



- FOLLOW ALL STANDARD AND LOCAL ELECTRICAL CODES.**
- DO NOT ALLOW WATER OR FOREIGN OBJECTS TO GET INSIDE THE UNIT.**
- DO NOT PLACE OBJECTS OR LIQUIDS ON TOP OF THE UNIT.**
- DO NOT LOCATE THE UNIT NEAR RUNNING WATER.**

## PRELIMINARY INSTALLATION

### INSTALLATION CONSIDERATIONS


Prior to installing the Series 700A/V-S, be sure to take into consideration the site you have selected. Power Conditioners produce heat and therefore require ventilation as well as accessibility. Consider these factors:

- Ventilation
- Size of the Power Conditioner
- Weight Load
- Audible Noise Requirements
- Remote Emergency Power Off (Repo)
- Monitors
- Options
- Clean Environment
- Input Source Voltage
- Receiving Facilities
- Distribution of Power
- Room Temperature
- Clearances
- Accessibility
- Excessively Long Power Runs
- Proper Ground Techniques

### CHOICE OF LOCATION

The unit has been completely inspected and extensively tested under various load conditions prior to shipment. Care to install it at a proper location will assure long trouble-free operation.

The unit is air cooled with the air intake at the front and exhausts at the top. Therefore, it should be installed in a clean, dry place with enough clearance to allow a free flow of air. Allow a minimum of 36" in front of the 700A/V-S for installation, operation, and maintenance. There is no clearance required on either the left or right hand side of this enclosure. Either or both sides, as well as the rear of the enclosure, can be set flush up against a wall. Input and output conductors should then enter/exit via the top and/or bottom of the enclosure as indicated.

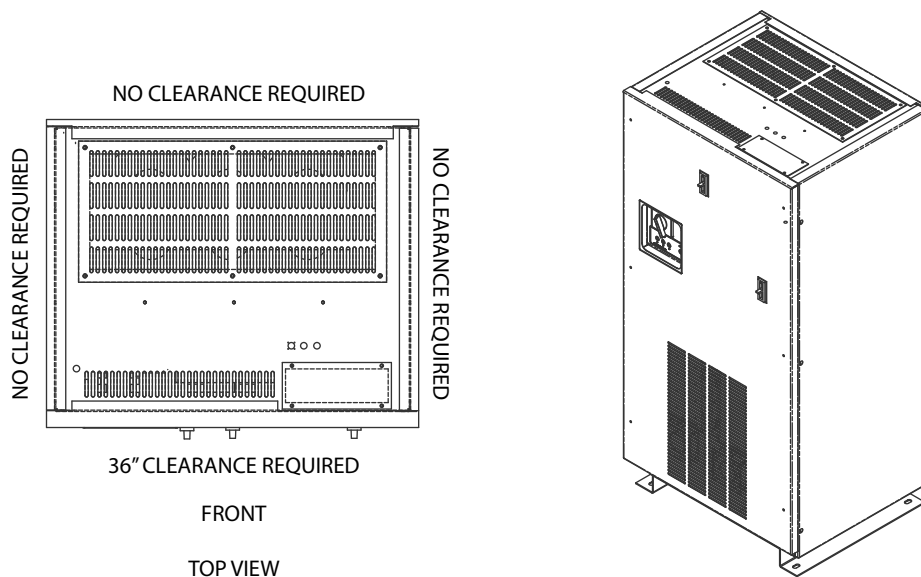

## PRELIMINARY INSTALLATION (continued)


### INPUT AND OUTPUT BREAKER SIZE

OUTPUT KVA CONTINUOUS	INPUT BREAKER SIZE	OUTPUT BREAKER SIZE
30 kVA (60kVA Intermittent)	110A @ 208V & 220V 100A @ 240V 60A @ 480V 40A @ 600V	60A, 3P @ 480V

### WEIGHTS, BTU AND DIMENSIONS


OUTPUT KVA	WEIGHT	OPERATIONAL BTU/HR TYPICAL	MAXIMUM BTU/HR	DIMENSIONS
60 k(i)	400 kg (880 lbs)	1,545*	3,090	736.6mm x 609.6mm x 1498.6mm 29" x 24" x 59" inches

\* Stated BTU's / Hr is at 30KVA rated load, 100% duty cycle. Operational BTU's / Hr is typically at 50% of rated load. Input over current protection provided by others.



**\*\*\* CAUTION \*\*\***

**To reduce the risk of fire, use only on circuits provided with ampere branch circuit protection as noted in the table above, in accordance with the National Electric Code, ANSI/NFPA 70.**



If unit is provide with no output circuit breaker option, output over-current protection and a disconnect device (circuit breaker) shall be provided by others.

## INPUT WIRE SIZE, GROUNDING AND OUTPUT WIRING

NOTE: Refer to the latest edition of The National Electric Code Requirements for over-current protection and wire sizing.

**Refer to the latest edition of The National Electric Code Requirements for over-current protection and wire sizing.**

### INPUT WIRE SIZE, GROUNDING AND OUTPUT WIRING

- A. Conduit should be used for both input and output wiring.
- B. Input wire ampacity is specified in NEC table 310.15(B)(16). Specifying not more than 3 connections in a raceway based on an ambient of 30°C and wire rated for 90°C (Note: amperages will need to be adjusted for 40° C ambient applications). Ground wire sizing is specified in NEC table 250.122.
- C. Input phase conductors are terminated directly to the input circuit breaker terminals.  
Wire range:

208 VAC, 220VAC	110 Amp breaker	#14 AWG to #3/0 AWG
240 VAC	100 Amp breaker	#14 AWG to #3/0 AWG
480 VAC	60 Amp breaker	#14 AWG to #3/0 AWG
600 VAC	40 Amp breaker	#14 AWG to #3/0 AWG

- D. Input ground lug TA-2/0, max wire range 14 AWG - 2/0 AWG one piece.
- E. Output is a 4 wire (5 including ground). If four (4) current carrying conductors are used in a raceway the neutral is assumed to be current carrying and the wire must be de-rated as indicated in the 2011 NEC table 310.15(B)(16).

- Example:
1. Assume #10 wire max current = 25 Amps.
  2. Multiply 25 x .8 = 20
  3. 20 Amps is max current for #10 wire in a raceway with 4 conductors.

NOTE: Installation is subject to local codes - verify with a local electrical inspector.

- F. All output ground and neutral terminals are copper bus bars w/ two holes. Double bolted lug are recommended. Manufactured by Burndy

**RECOMMENDED LUGS:** Double bolted type as supplied by Burndy Copper Compression lug, 2 hole Type YA, 1/4" stud, 3/4" spacing.

YA6CL-2TC14E2 #6 wire	YA4CL-2TC14E2 #4 wire	YA2CL-2TC14E2 #2 wire
YA1CL-2TC14E2 #1 wire	YA25L-2TC14E2 #1/0 wire	YA26L-2TC14E2 #2/0 wire
YA27L-2TC14E2 #3/0 wire	YA28L-2TC14E2 #4/0 wire X 2	

Output connections are made directly to the output breaker(s) and output neutral and ground bus provided. The load current is not to exceed 80% of the output breaker(s) rating, and not to exceed the rated total current.



## INPUT WIRE SIZE, GROUNDING AND OUTPUT WIRING (continued)

### F. Continued

Output wiring sizes:

480/277 VAC    60 Amp breaker    #14 AWG to #3/0 AWG


G. Output neutral to ground bonded during manufacturing of the power conditioner. Output Neutral is already grounded by the factory.

H. Installation is subject to local codes. Verify with a local electrician inspector.

**The unit is constructed using an isolation transformer and is considered to be a “separately derived system”. It should be grounded in accordance with the NFPA 70 article 250.20 “Alternating-Current Circuits and Systems to Be Grounded”, article 250.20(D) “Separately Derived Systems” and article 250.30 “Grounding Separately Derived Alternating-Current Systems”.**

# INSTALLATION


## CABINET OUTLINE - FRONT VIEW

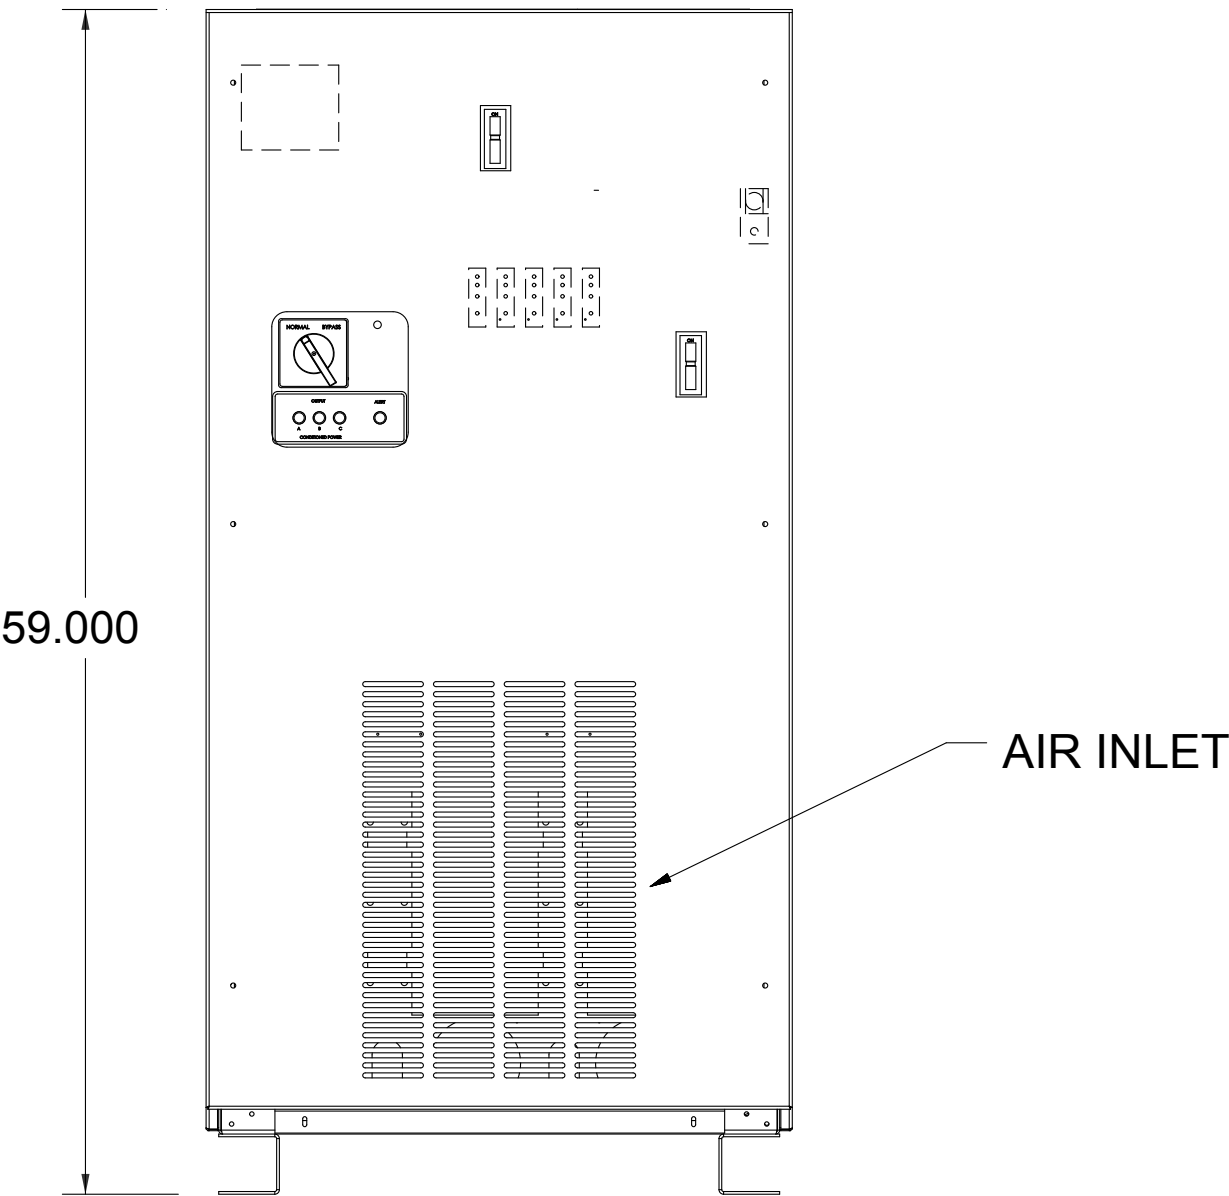

FRONT VIEW

## INSTALLATION (continued)


### CABINET OUTLINE - TOP AND BOTTOM VIEW

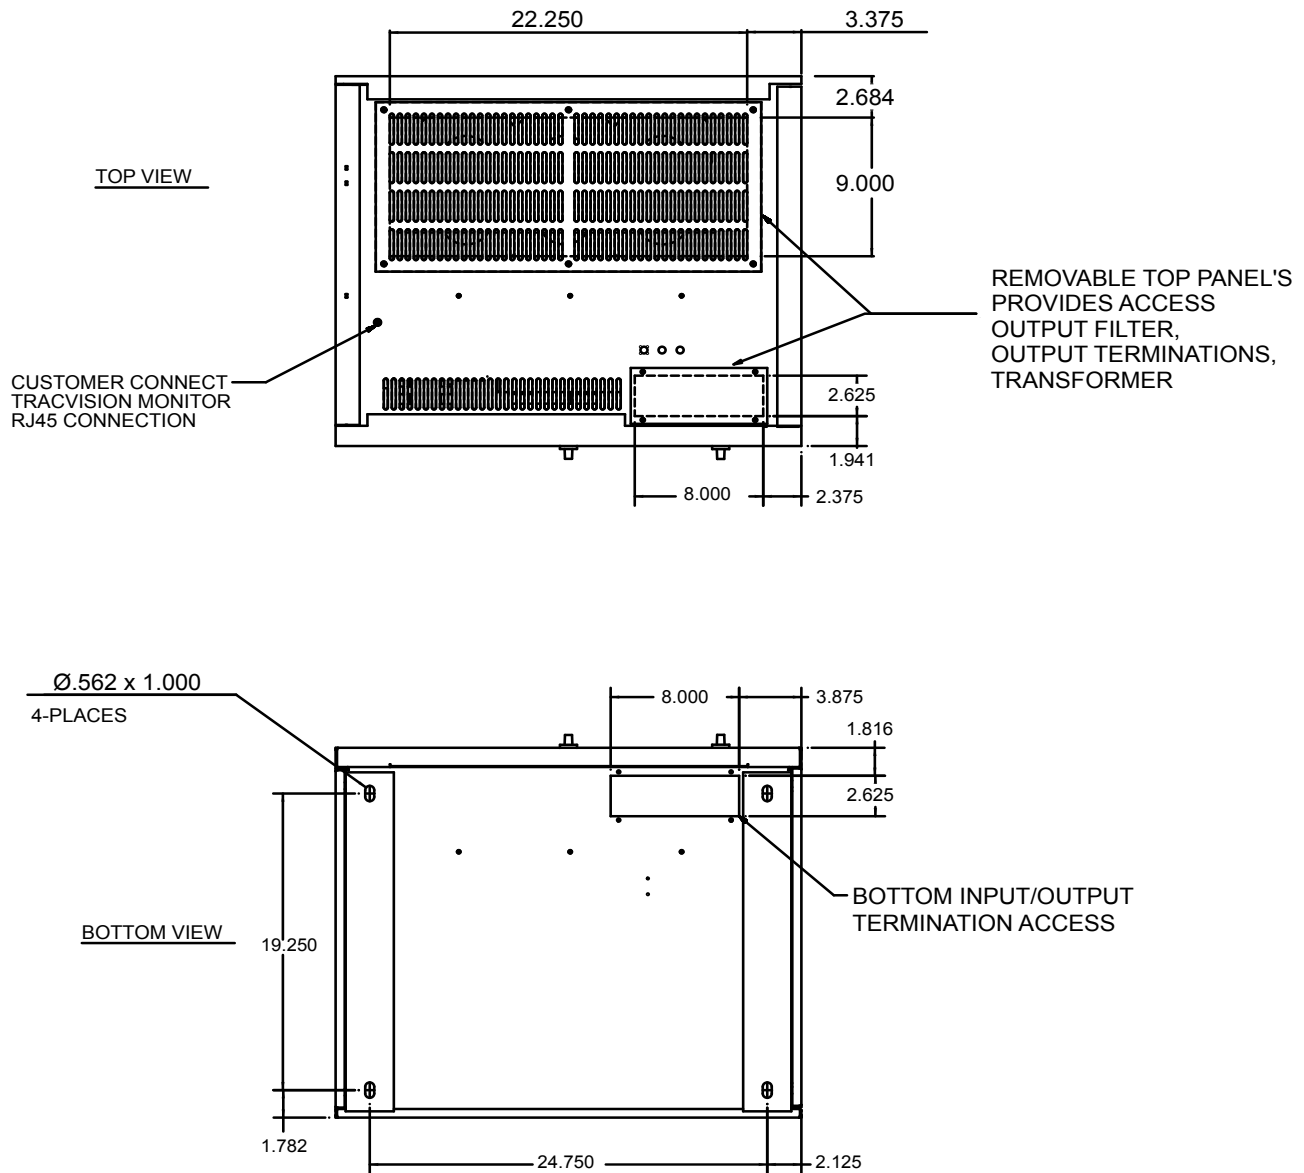

## INSTALLATION (continued)

### INPUT AND OUTPUT CONNECTIONS

1. Input connections are made directly to the unit's 3 pole main input circuit breaker and input ground lug provided. Note the bottom access wire run route illustrated below.
2. Output connections are made directly to the output breaker(s) and output neutral and ground bus provided. The load current is not to exceed 80% of the output breaker(s) rating, and not to exceed the rated total current.

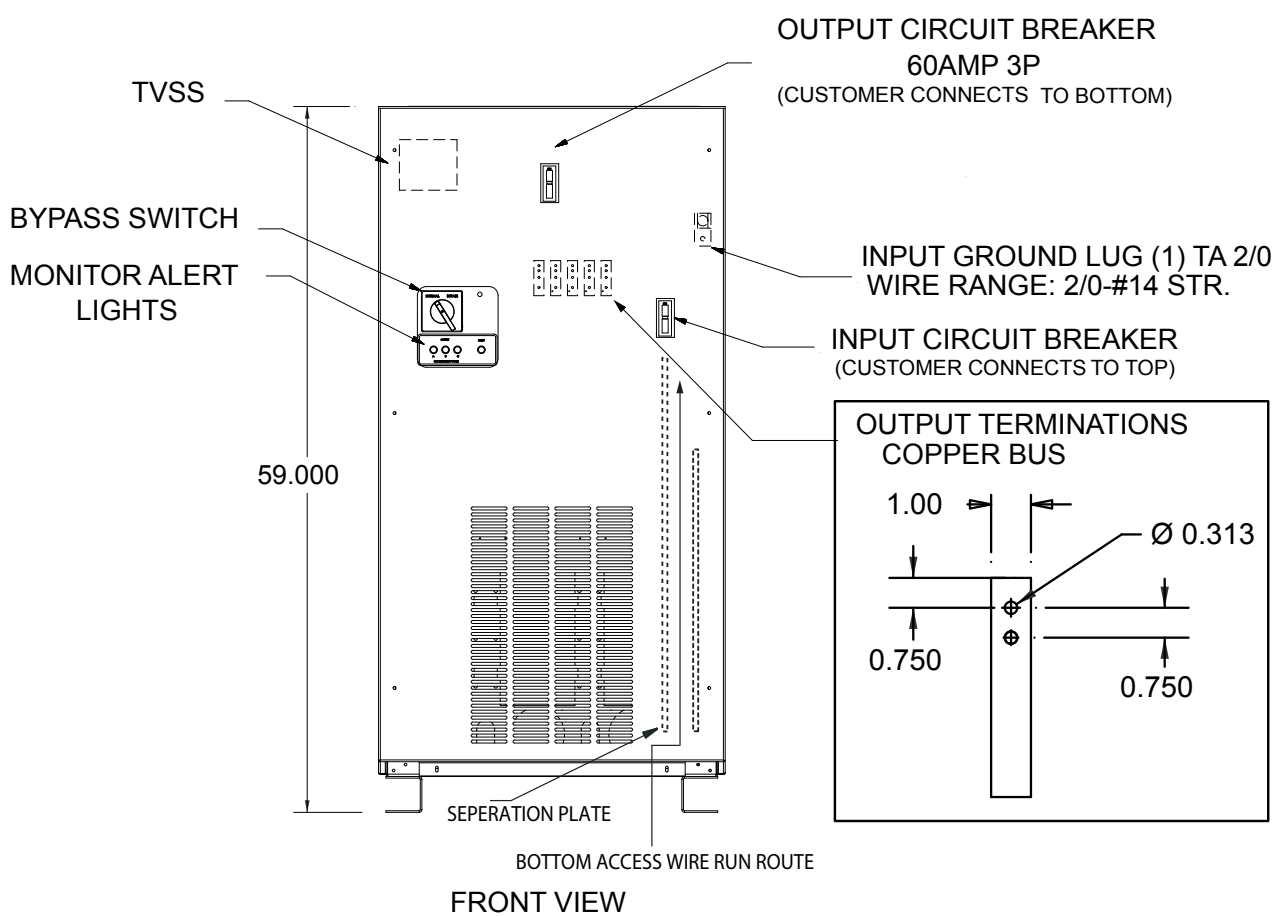

## BYPASS SWITCH



### \*\*\*\* CAUTION \*\*\*\*



**Prior to switching from one position to another- turn off the AC input breaker.**

The manual bypass switch is a break before make switch located on the Series 700 A/V-S. The manual bypass switch is used to bypass all power electronics in case of failure.

### NORMAL MODE

With the switch in the normal position, the Series 700 A/V-S will provide clean and regulated power to the critical loads. The Series 700 A/V-S should have the switch in the normal position unless a failure has occurred.

### BYPASS MODE

With the switch in the bypass position, the Series 700 A/V-S will provide clean power to the critical loads. In the bypass position, the unit will not regulate the incoming voltage. The Series 700 A/V-S should be placed in the bypass position when a failure of the system has occurred. This provides the user with some protection until a service technician arrives.

### REMOTE EMERGENCY POWER OFF (REPO) OPTION

The REPO is operated by a remote push button that when depressed will shunt trip the Series 700A/V-S input breaker and disable the unit. This option may be added to units in the field.

Contact the Customer Support Department if you wish to add this option.

### WEB BASED MONITORING (OPTIONAL)

Operational data can be viewed via internet connection with integrated software including voltage, amperage, time and date. The data collection program module can be custom tailored for specific applications. Optional connections include, 10 base T- Ethernet, Bluetooth, RS 232/422 or Modbus. Refer to the manual that was supplied with this option.

## START UP



### \*\*\*WARNING\*\*\*



**THERE ARE DANGEROUSLY HIGH VOLTAGES PRESENT WITHIN THE ENCLOSURE OF THE POWER SUPPLY SYSTEM. CAUTION MUST BE TAKEN WHEN WORKING WITH THE ENCLOSURE. IT IS RECOMMENDED THAT ALL WORK BE PERFORMED BY QUALIFIED ELECTRICAL PERSONNEL ONLY.**

NOTE: INITIAL START-UP SHOULD BE PERFORMED WITH NO LOAD ON SYSTEM.

1. Re-install all panels that may have been removed during installation.
2. Make sure the input circuit breaker is in the **off** position.
3. Energize the primary building power.
4. Turn on the main AC input breaker.
5. Verify that the output voltage is within the specified range.
6. Verify output phase rotation is correct.
7. Turn the system off.
8. Connect the loads one at a time and repeat Step 4.

## PREVENTIVE MAINTENANCE



\*\*\*\* **WARNING** \*\*\*\*



**DANGER OF ELECTRICAL SHOCK, TURN OFF ALL POWER SUPPLYING THIS EQUIPMENT PRIOR TO MAINTENANCE.**

To ensure longer component life and trouble-free operation, minor preventive maintenance procedures should be performed at regular intervals, for example once every year. More frequent inspection intervals would be needed for more severe operating conditions and larger number of hours of continuous operation.

1. Remove front and side panels and at each service inspection any accumulated dust, dirt or foreign particles should be carefully removed. Special care should be exercised in cleaning the thyristors (SCR's), heat sinks and the control assembly.
2. Inverse Parallel Silicon Rectifiers (SCR's) or Thyristors - The silicon controlled rectifiers (SCR's or Power Mods) usually fail in the shorted mode. When this happens, normally the fusible link in series with the SCR will be blown open to clear the short and prevent damage to the transformers. If a blown SCR is suspected, contact Transtector for service.
3. A simple performance checklist has been developed for use in maintenance. See "*Performance Checklist*" and check off items 1-7.
4. After items 1-7 have been checked on the "*Performance Checklist*", the next step is to check the operation of the system.
5. Replace front and side panels. Turn unit on with no load. Check item 8 on the "*Performance Checklist*".
6. Turn on loads and check items 9-10 off the "*Performance Checklist*".
7. Check to make sure all fans are operational and check off item 11.

**NOTE:** Preventive Maintenance Plans are available. Please contact the Customer Support Group for information. Call 1-800-882-9110 X6112.

## SERVICE

Transtector shall provide immediate phone support/consultation and if possible, same day parts shipment. (contact must be prior to 12:00 PM PST). If necessary, on site service shall be scheduled the same day for service to be conducted within 24 to 48 hours, based on customer requirements. Typical service hours are 8 AM to 4 PM Monday through Friday.

Rick Ribbeck	Phone: (01) 208-762-6112 or 1-800-882-9110 extension 6112
Transtector Systems	Cell: (01) 208-755-2072
10701 Airport Dr.	Fax: (01) 208-762-6133
Hayden Lake ID 83835	E-mail: rick.ribbeck@protectiongroup.com

## PERFORMANCE CHECKLIST

Company \_\_\_\_\_

Model # \_\_\_\_\_ Serial # \_\_\_\_\_

1. Customer Comments or Problems \_\_\_\_\_
2. Power Processor Environment Clean and Dust Free    Yes \_\_\_\_\_ No \_\_\_\_\_
3. Phase Rotation Correct (ABC)    Yes \_\_\_\_\_ No \_\_\_\_\_
4. Electrically wired properly ie...Conductor Sizing, Breakers, Grounding
5. Verify Input Voltage (See specification tag)
6. Check Tightness of Electrical Connections:  
       \_\_\_\_\_ Input Connections \_\_\_\_\_ Output Connections \_\_\_\_\_ Heatsink Connections (SCR's)  
       \_\_\_\_\_ Circuit Board Connections \_\_\_\_\_ By-Pass Switch \_\_\_\_\_ Fuse Connections  
       \_\_\_\_\_ Fan Connections \_\_\_\_\_ Transformer Connections
7. Exercise all circuit breakers-  
       \_\_\_\_\_ Input Breaker \_\_\_\_\_ Output Breakers
8. Input/Output Voltage Checks (Adjust as Needed).  



<u>No Load Input</u>  A-B _____ VAC _____ B-C _____ VAC _____ A-C _____ VAC _____	<u>No Load Output</u>  A-N _____ VAC _____    A-B _____ VAC _____ B-N _____ VAC _____    B-C _____ VAC _____ C-N _____ VAC _____    A-C _____ VAC _____
---	---
9. 

<u>Available Load Input</u>  A-B _____ VAC _____ B-C _____ VAC _____ A-C _____ VAC _____	<u>Available Load Output</u>  A-N _____ VAC _____    A-B _____ VAC _____ B-N _____ VAC _____    B-C _____ VAC _____ C-N _____ VAC _____    A-C _____ VAC _____
--	--
10. Input/Output Current Checks (Balance as Needed).  

<u>Input</u>  A _____ Amps B _____ Amps C _____ Amps	<u>Output</u>  A _____ Amps B _____ Amps C _____ Amps N _____ Amps G _____ Amps
--	---
11. Fans Operational \_\_\_\_\_



## GENERAL TROUBLESHOOTING

	<p><b>**** WARNING ****</b></p> <p><b>THERE ARE DANGEROUSLY HIGH VOLTAGES PRESENT WITHIN THE ENCLOSURE OF THE POWER SUPPLY SYSTEM. CAUTION MUST BE TAKEN WHEN WORKING WITH THE ENCLOSURE. IT IS RECOMMENDED THAT ALL WORK BE PERFORMED BY QUALIFIED ELECTRICAL PERSONNEL ONLY.</b></p>	
---	--	---

SYMPTOM	PROBABLE CAUSES
1. No Output on One or More Phases.	A. No Input. B. Blown Fuse. C. Defective SCR or Power Mod. D. Defective Control Card. E. Defective Sense Card.
2. Output is too High or too Low.	A. Input Out of Range. B. Control Card Adjustment. C. Defective Control Card. D. Defective Sense Card. E. Defective SCR or Power Mod.
3. Input Breaker Tripping Off.	A. System Overloaded. B. Defective Breaker. C. Shorted Taps.

## SERVICE

Transtector shall provide immediate phone support/consultation and if possible, same day parts shipment. (contact must be prior to 12:00 PM PST). If necessary, on site service shall be scheduled the same day for service to be conducted within 24 to 48 hours, based on customer requirements. Typical service hours are 8 AM to 4 PM Monday through Friday.

Rick Ribbeck	Phone: (01) 208-762-6112 or 1-800-882-9110 extension 6112
Transtector Systems	Cell: (01) 208-755-2072
10701 Airport Dr.	Fax: (01) 208-762-6133
Hayden Lake ID 83835	E-mail: rick.ribbeck@protectiongroup.com

## PARTS LIST

QTY	208 V INPUT	220 V INPUT	240 V INPUT	480 V INPUT	600 V INPUT	DESCRIPTION
	PART #	PART #	PART #	PART #	PART #	
1	204414	203992	204414	204414	204416	MAIN TRANSFORMER
1	110875	110895	110217	110212	110210	MAIN INPUT BREAKER
3	18276	18276	18276	18276	18276	FILTER CAPACITOR
3	17538	17538	17538	17538	17538	FILTER RESISTOR
3	16638	16638	16638	16638	16638	SENSE FUSE (.75A)
3	109580	109580	109580	109580	109580	TVSS FUSE (SC-30)
1	111601	111601	111601	111601	111601	TVSS
1	13789	13789	13789	13789	13789	CONTROL RELAY
1	13696	13696	13696	13696	13696	PILOT LIGHT - RED (ALERT)
3	049120-DSP	049120-DSP	049120-DSP	049120-DSP	049120-DSP	MAIN CONTROL BOARD
1	100810	100810	100810	100810	100810	BYPASS SWITCH
1	11173	11173	11173	11173	11173	CONTROL TRANSFORMER
1	114369	114369	114369	114369	114369	OPTIONAL WEB BASED MONITOR

CF - CONSULT FACTORY

QTY	277/480 V OUTPUT	DESCRIPTION
	PART#	
1	110212	OUTPUT CIRCUIT BREAKER
3	303094	HEAT SINK ASSEMBLY
3	400392	HEAT SINK
3	109054	PILOT LIGHT - GREEN (A,B,C)
3	23943	SENSE BOARD
3	25723	SNUBBER BOARD
21	109905	POWER MODULE (SCR)
3	13319	THERMAL SENSOR
6	104607	FUSIBLE LINK
3	104561	DIODE
1	112882	COOLING FAN
1	111555	CONTROL FUSE (FNQ-R5A)
3	019934	CONTROL FUSE (FNQ-R1A)
2	111557	CONTROL FUSE (FNQ-R3A)
3	18702	CONTROL FUSE (FNQ-.6)

## WARRANTY VALIDATION

### WARRANTY VOID UNLESS THIS FORM IS COMPLETE AND RETURNED TO TRANSTECTOR SYSTEMS

Transtector Systems, Inc. warrants that the Series 700 A/V-S Power Conditioner and its components will remain free from defects in material and workmanship for the period of two (2) years from the date of shipment from its factory, and agrees to replace F.O.B. its factory any part or parts which fail through defect in material or workmanship during such period. Power Conditioners installed within the contiguous United States (lower 48 states) and Canada include a 1st year factory authorized on-site labor warranty, Monday – Friday, 8 A.M. to 4 P.M., covering factory servicemen travel expenses and the cost of transporting components to and from the factory. Power Conditioners installed outside of the contiguous United States and Canada are covered by a two (2) year parts only warranty.

- The Warranty shall be effective only if and so long as the system is installed and operated in the manner specified in the manual which accompanied the Power Conditioner and operated within the ratings on the nameplate of the system. If the component fault has been caused by misuse or abnormal (internal or external) conditions in the judgment of authorized factory or service personnel after inspection either on-site or at our plant, the customer will be charged for repairs based on parts and labor required.
- The Warranty shall be void if any alteration is made to the system or any of its components are altered by anyone other than authorized personnel.
- This Warranty is in lieu of all other warranties, expressed or implied. The giving of, or failure to adhere to any advice or recommendations by Transtector Systems shall not constitute any warranty by, or impose any liability upon the company. Transtector Systems Inc. neither assumes nor authorizes any person to assume for it, any liability other than that specifically set forth in this Warranty. Except for its obligations, Transtector Systems, Inc. assumes no responsibility for consequential or other damages resulting from defects in workmanship or failure of the system or any components.
- This warranty does not apply if the cause of the failure to properly perform is fire, flood, windstorm, earthquake, misuse, or abuse or any other reason other than those described above, i.e. defects in manufacture. If the component fault has been caused by misuse or abnormal conditions in the judgment of factory personnel after inspection at our plant, the customer will be charged for repairs based on parts and labor required.

Serial #

Model #

Company

Date

Address

City/State/Zip

Contact

Title

Phone

Start up Organization


Complete and return form to:

Attn: Rick Ribbeck  
Transtector Systems, Inc.  
10701 Airport Dr.  
Hayden Lake ID 83835  
Phone 800-882-9110 X 6112  
Fax 208-762-6133  
E-mail: rick.ribbeck@protectiongroup.com


# APPENDIX A

## RELATIVE DRAWINGS & SCHEMATICS


# CABINET LAYOUT

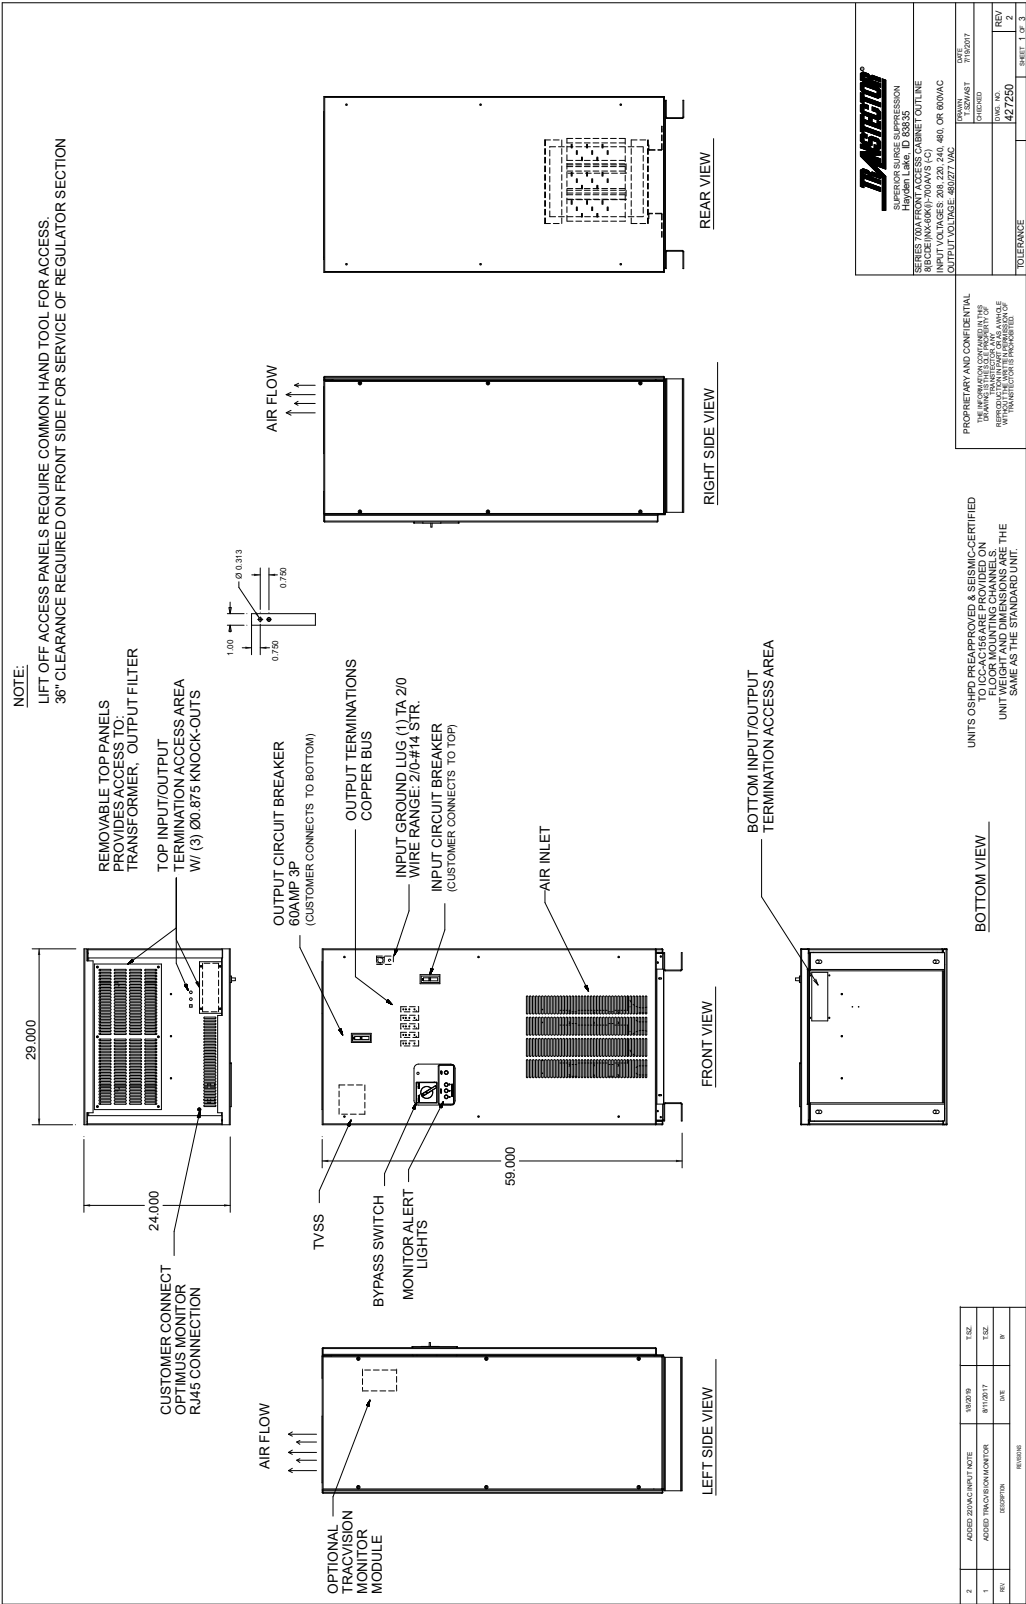

CABINET LAYOUT

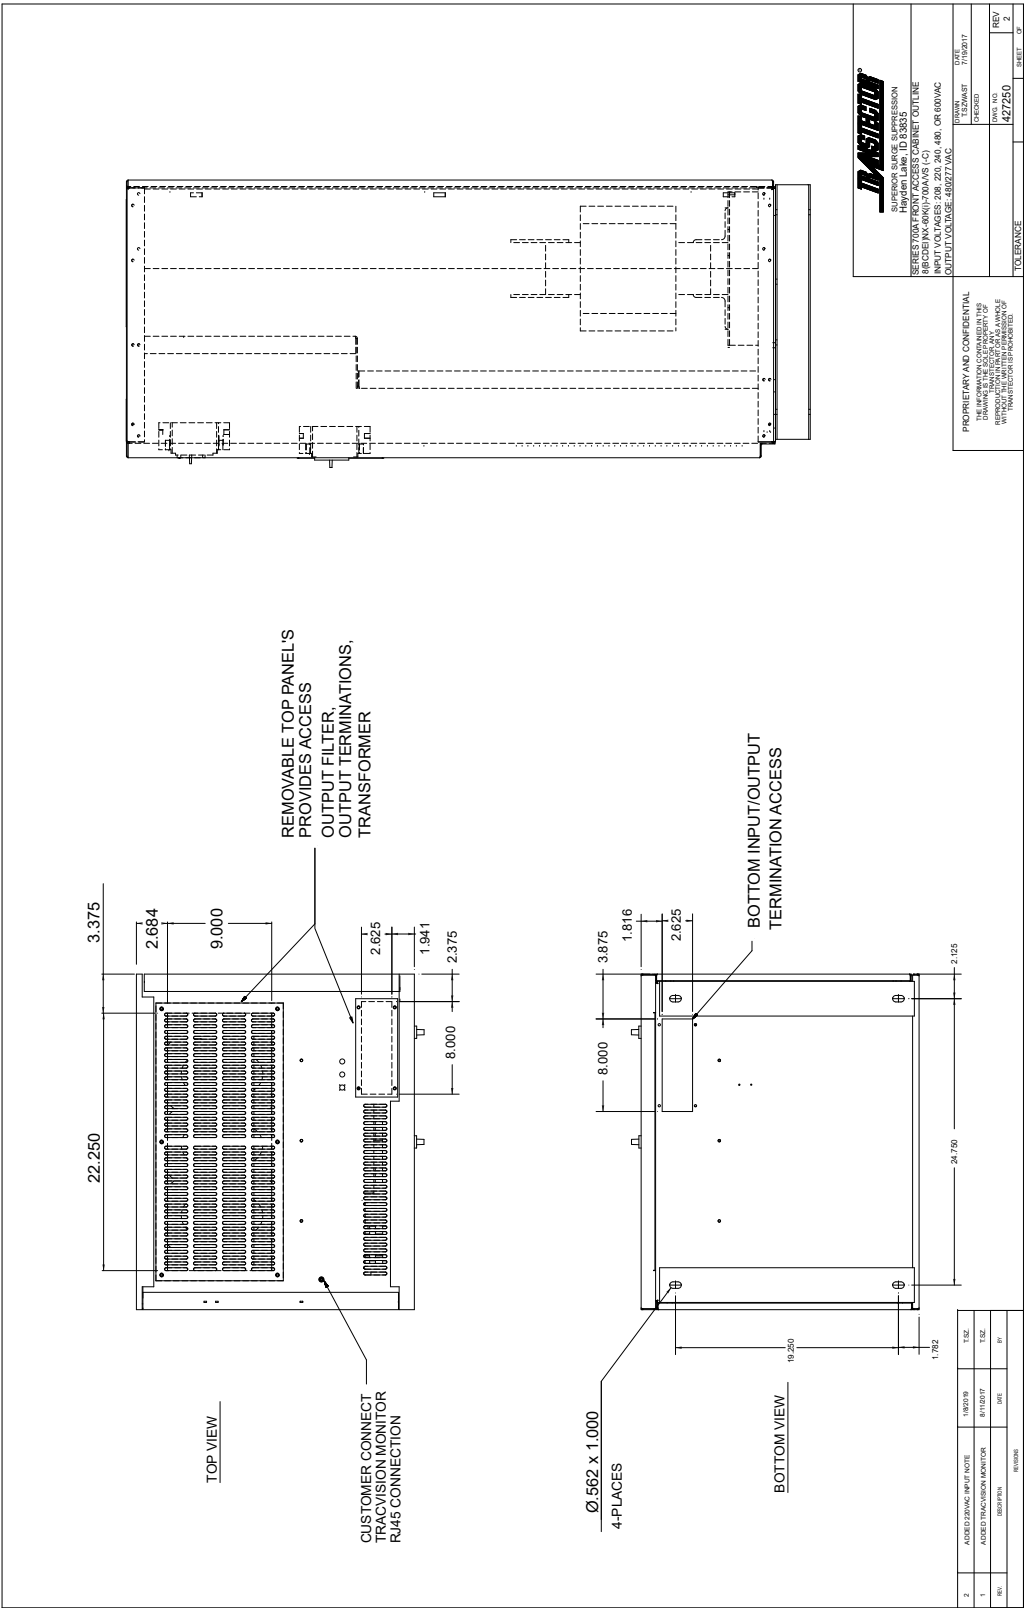

CABINET LAYOUT

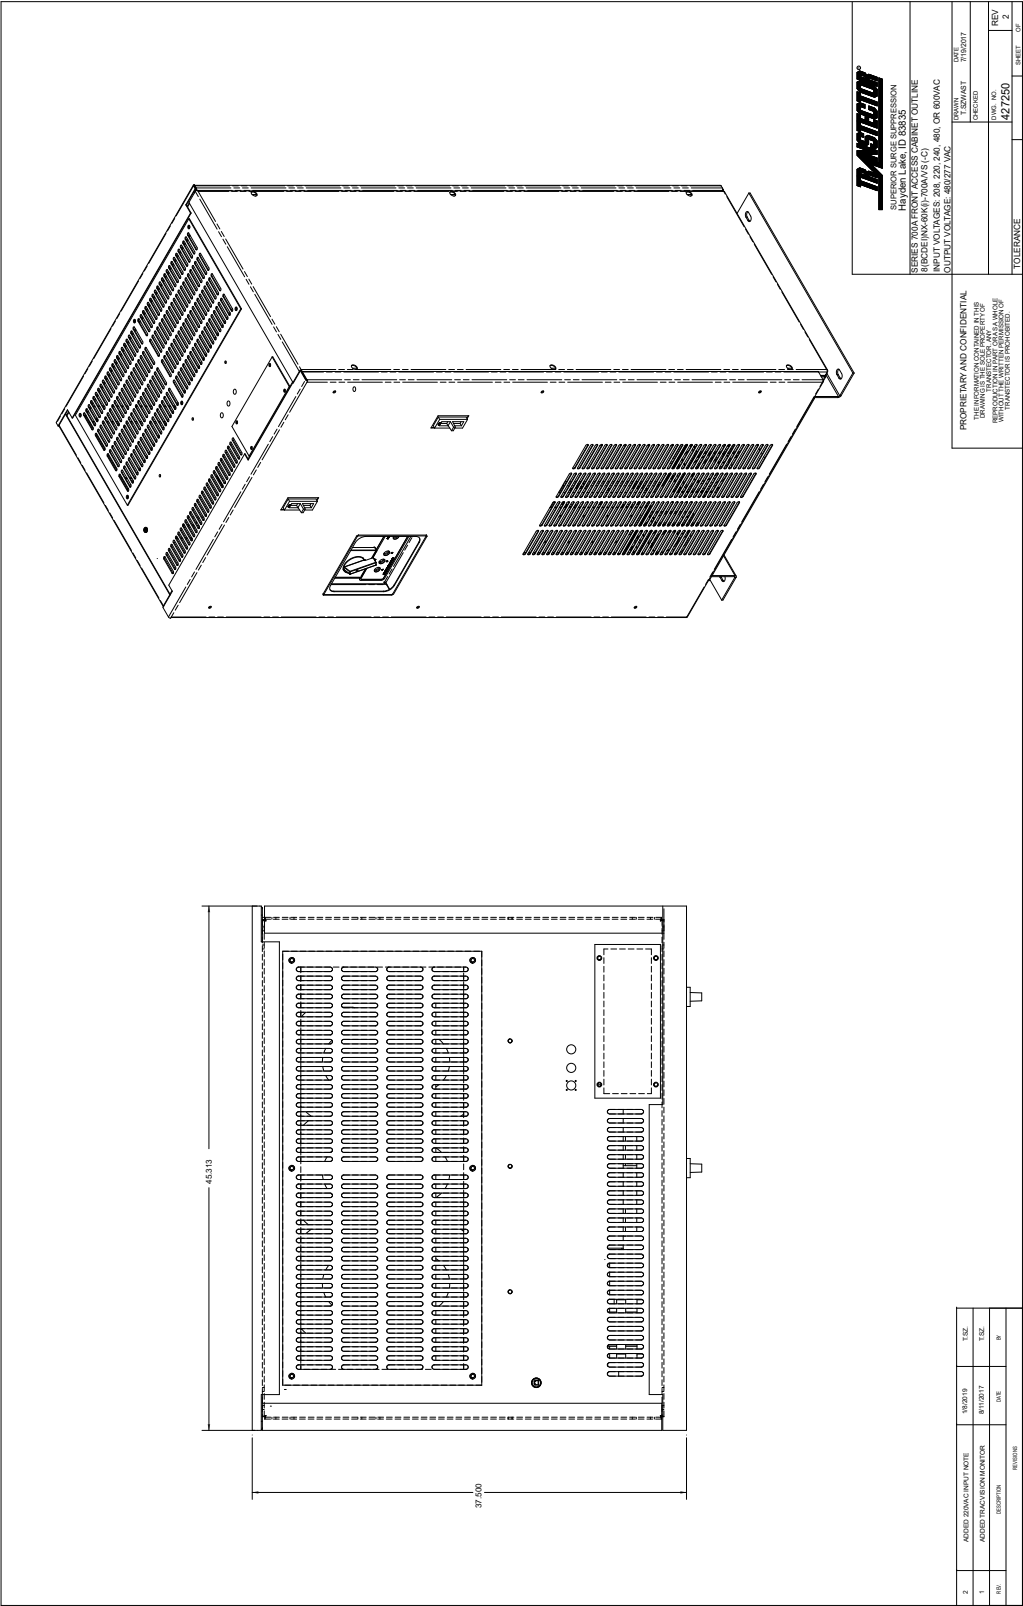

## SEISMIC CALCULATIONS

Coastal California, Zone 4

$$Z = 0.4$$

Equipment Anchorage

$$I = 1.5$$

Uniform Building Code, Table 160

$$C_p = 0.75$$

$$F_p = Z \times I \times (C_p) \times W_p = 0.45 \times W_p$$

Cabinet Weight

$$1142 \text{ lbs.}$$

Center of Gravity Height

$$23.75 \text{ in.}$$

$$W_p (\text{max}) = 1442.1 \text{ lbs} \times 1.15 = 1313.3 \text{ lbs.}$$

$$W_p (\text{min}) = 1065.9 \text{ lbs.} \times 0.85 = 970.7 \text{ lbs.}$$

$$F_p = 0.45 \times 1313.3 = 591 \text{ lbs.}$$

$$(F_p) = 0.15 \times 1313.3 = 197 \text{ lbs.}$$


$$M_o = 23.75 \times 591 = 14036.25 \text{ in. lbs.}$$

Vertical Force

Moment

$$\text{Tension} = F_p \times C_g / V_4 = 1406.7 \text{ lbs.}$$

$$\text{Shear} = W_p(\text{max})F_p/4 \text{ lbs., each anchor} = 328.3 \text{ lbs.}$$

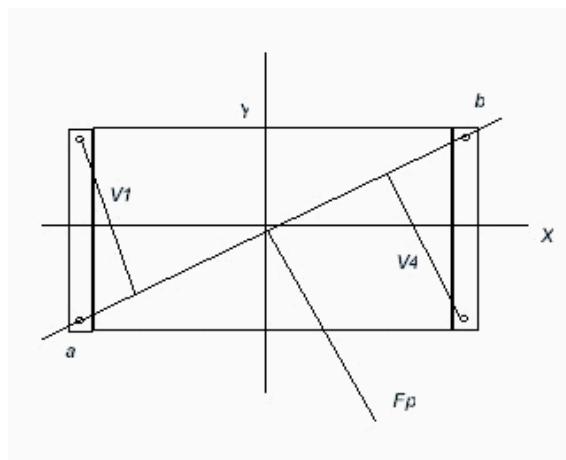

Corners (a,b) 39.5 in  
 $V_1 = V_4 = 19.3 \text{ in.}$

EXAMPLE: <Rawl Power Bolt # 6913>

3/8" embedded 2.5" / min 2000 psi concrete

Tension rating of bolt: 5200 lbs.

Shear rating of bolt: 7270 lbs.

$$\text{Interaction} = (T/T_{\text{bolt}}) + (S/S_{\text{bolt}})$$

$$\text{Interaction} = 0.32$$

$$\text{Interaction} = < 1.00 \text{ (OK)}$$



## SYMBOL LIBRARY



Caution

This symbol indicates that caution should be taken when performing the process required in this manual. Damage to the unit or personal harm could happen if proper precautions are not taken.



Shock Hazard

This symbol indicates that there is a risk of electrical shock if proper precautions are not followed. Only qualified personnel should perform the actions required in this manual.

**NOTES**